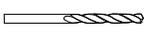


PARTS LIST

Image	Name	8' x 8' Greenhouse	8' x 12' Greenhouse	8' x 16' Greenhouse	8' x 20' Greenhouse	8' x 24' Greenhouse
	Shade Net	8' 6" x 14'	12' 6" x 14'	16' 6" x 14'	(1) 8x8 Kit & (1) 8x12 Kit	(2) 8x12 Kit
	Eye Bolt	6	10	12		
	Flat Washer	6	10	12		
	Nut	6	10	12		
	1/4" Drill Bit	1	1	1		
	Rope	50'	100'	100'		


Watch installation video at:

<https://www.youtube.com/watch?v=Hlf5FqExQTA>

NOTE: Install your shade net on a calm day. Installation requires 2 people.

1. Close all roof vents completely prior to installation.
2. Use the provided drill bit to drill a hole at the halfway point on the base kit, or if you have a longer unit space out the holes for the eyebolts according to how many came in your kit verses how many grommets on your shade net sides for attaching with the rope see **A**.
3. See **B**, you will switch the top bolt on the base kit to the eyebolt on all four corners of your base kit.

Note: Eyebolt and flat washer on outside of base, and the nut on the inside of the base kit see diagram **C**.

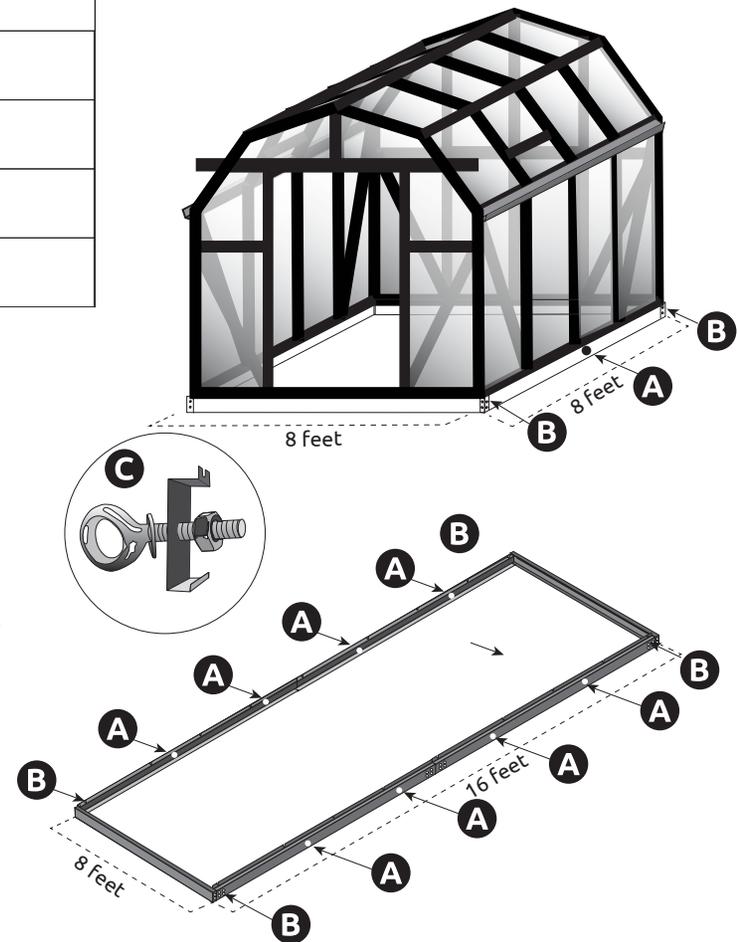

4. Place the shade net in front of your Greenhouse. The front of the shade net measures **14'**, fold the shade net in an accordion fashion for the easiest installation see **D**.

5. With the help of another person, lift the folded shade net and place it over the front of your greenhouse, then gently unfold and spread out across the front of your greenhouse.

6. Open all Roof Vents, then use rope to tie the shade net down weaving from the grommet to the eyebolts as shown in **E**. For **1** tie a regular square knot, then at **7** tie the taut line knot, see **F**. This will allow you to tighten and adjust your shade net after initial installation.

NOTE: Remove your shade net during seasons when not needed and store in a dry place.

